Telegesis		TG-RF-PM-501 ZigBee RangeFinder
ZigBee RangeFinder		Product Manual 0501 r8

Telegesis ZigBee RangeFinder

Product Manual

Rev: 8

Date: Sept 2014

Guide for firmware versions: R311 and R211

Patent pending: GB1222898.7

Table of Contents

Table of Contents....2
Package Contents....5
Specifications....6
Handheld Terminal (HHT)....6
Satellite (SAT-x)....6
Handheld Terminal Unit....7
Layout....7
Functionality....9
Start-up:....10
Menu Screens:....11
Normal Test Modes:....12
Continuous Test Modes:....16
Device Configurations:....22
Firmware Upgrades:....26
Data Logging:....29
Device Info....32
Adjust Contrast....32
Power....34
Batteries....35
Charging....35
Power Saving....35
Satellite Unit....36
Layout....36
Functionality....37
Buttons....37
LEDs....37
Power....38
Batteries....38
Power Consumption....38
Usage....38
System Topology....38
Workflow....40

Interpreting Test Results 41
RSSI Calculation 41
Packet Error Rate 41
Pass/Fail Criteria 41
Warranty 42
Compliance with Laws and Regulations 44
Disclaimer 44
Contact Information 44

Table of Figures

Figure 1: Package Contents 5
Figure 2: Handheld Terminal Front 7
Figure 3: Handheld Terminal Back 8
Figure 4: Product Label 9
Figure 5: Start-up Screen 10
Figure 6: Start-up Screen 11
Figure 7: Pre-Test Screen 12
Figure 8: Test Start Screen 13
Figure 9: Screen for Test A and B 14
Figure 10: Energy Scan Screen 15
Figure 11: Tx tone 16
Figure 12: Continuous Ping Configuration 17
Figure 13: Continuous Ping Results 18
Figure 14: Single Channel E-Scan 19
Figure 15 One hop configuration screen 20
Figure 16 One Hop Test Result Screens 20
Figure 17: Configurations Screen 23
Figure 18: Advanced Configurations Screen 24
Figure 19: Configurations Parameter Limits 25
Figure 20 Firmware Upgrade Screens 26
Figure 21 HHT Firmware Upgrade 26
Figure 22 HHT Firmware upgrade options 27
Figure 23 SAT Firmware Options 28
Figure 24 Data Logger Screen 29
Figure 25: Device Information Screen 32
Figure 26: Adjust Contrast Screen 32
Figure 27: Battery Symbol 35
Figure 28: Battery Charging Symbol 35
Figure 29: Satellite Front 36
Figure 30: Satellite Back 36
Figure 31: Satellite Product Label 37
Figure 32: Satellite LED States 37
Figure 33: A typical floor plan with Smart Energy equipment locations 38
Figure 34: RangeFinder locations: Electric meter, Gas meter and Kitchen work surface 39
Figure 35: Workflow 40

Package Contents

The package contains the following items,

Figure 1: Package Contents

a) 1x Quick Start Guide
b) 4x 1.5V AA Alkaline Batteries
c) 2x Satellite Units SAT100
d) 1x USB A to USB Micro Cable
e) 1x Handheld Terminal ZHT100
f) 2x 1.2V AA 2000mA Rechargeable Batteries
g) 3x 2.4GHz Half-wave Antennas

Specifications

Handheld Terminal (HHT)

Model Number	ZHT100
RF Interface	2.4GHz IEEE802.15.4
RF Output Power	-9dBm to +8dBm (Standard Version)
	20,19,18,16,15,13,10,7,1dBm (Long Range Version)
Antenna	Half-wave Dipole Antenna 2dBi Gain
Battery	2x 1.2V 2000mAH NiMH Rechargeable
Charging	5Volts @ 300mA via USB Micro Connector
Operating Temperature	0 to 50C
Humidity	95% TH Non-condensing
IP Rating	IP54 (subject to testing)

Satellite (SAT-x)

Model Number	SAT100
RF Interface	2.4GHz IEEE802.15.4
RF Output Power	-9dBm to +8dBm (Standard Version)
	20,19,18,16,15,13,10,7,1dBm (Long Range Version)
Antenna	Half-wave Dipole Antenna 2dBi Gain
Battery	2x 1.5V AA Alkaline Batteries
Operating Temperature	0 to 50C
Humidity	95% TH Non-condensing
IP Rating	IP54 (subject to testing)

Handheld Terminal Unit

Layout

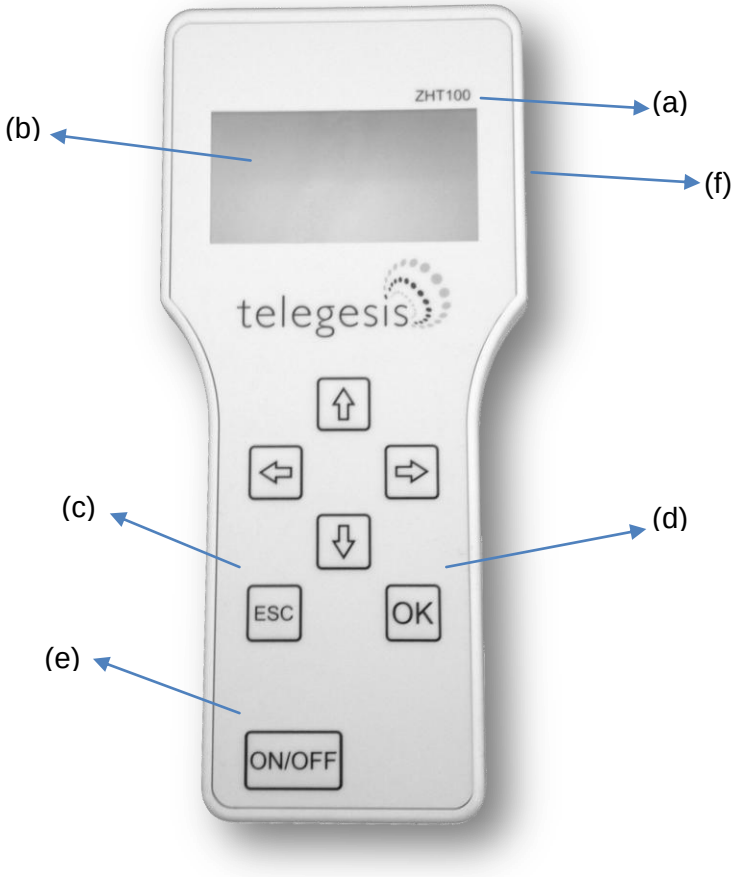

Figure 2: Handheld Terminal Front

Handheld Terminal Front

(a) Product Model Number
(b) LCD Display
(c) Escape (Back) Key
(d) Enter (Activate) Key
(e) Power On/Off Key
(f) USB-B Micro Connector

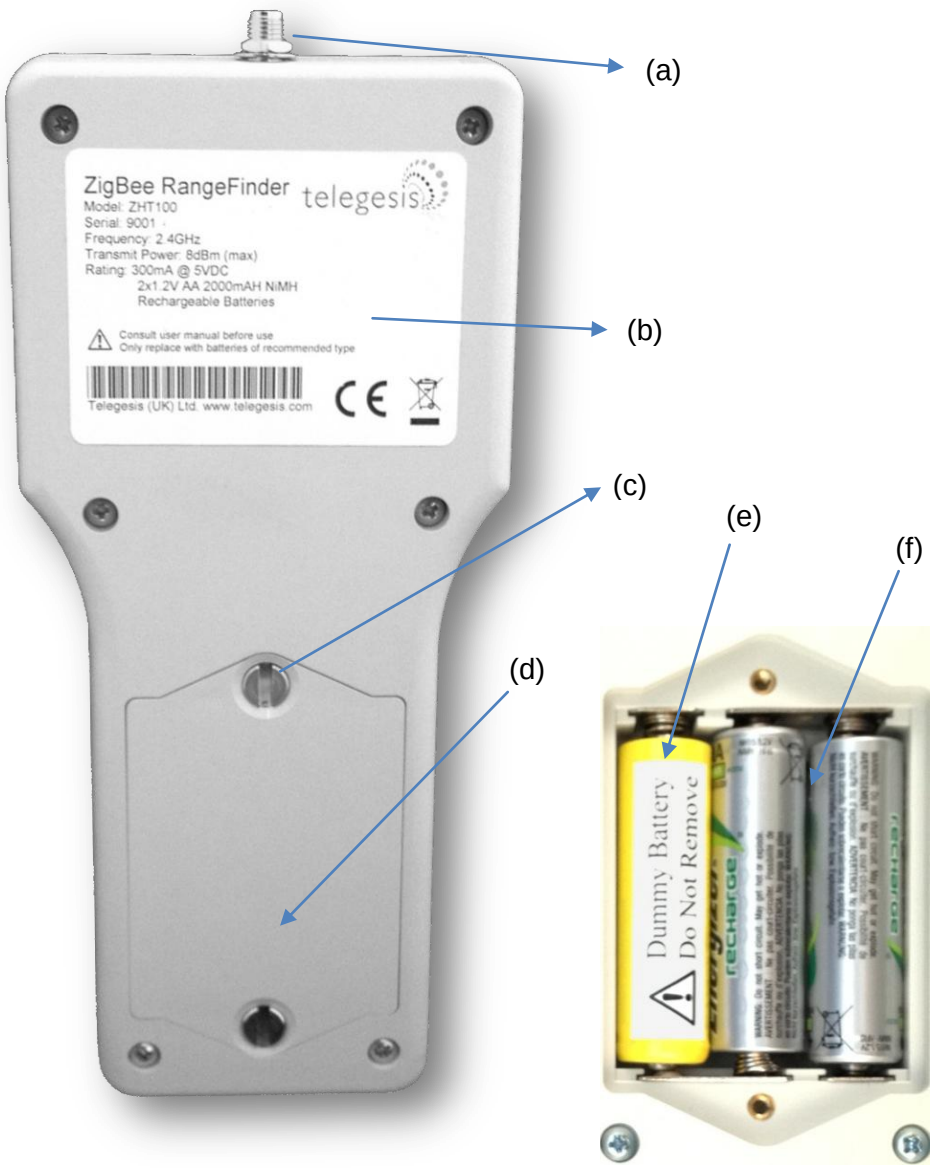

Figure 3: Handheld Terminal Back

Handheld Terminal Back

(a) SMA Connector for Antenna
(b) Product Label
(c) 2x Screw for Battery Compartment
(d) Battery Compartment
(e) Dummy Battery (non-removable)
(f) 2x Rechargeable Batteries

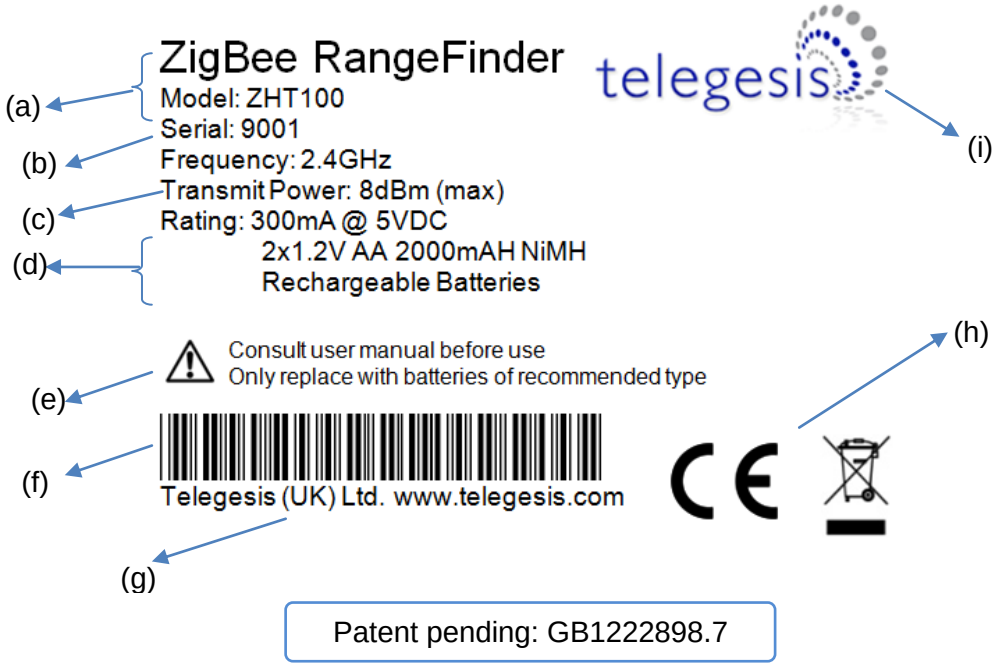

Figure 4: Product Label

ıication in
ɛrform the
ıs options

Handheld Terminal Label

(a) Product name “ZigBee RangeFinder” and product model number “ZHT100”
(b) Serial number of the product
(c) Operating parameters of the product
(d) Maximum RF Transmit power
- 8dBm for standard version
- 20dBm forLong Range version

(e) Warning
(f) Barcode with following content:
<Model>/L<Serial>
e.g. ‘ZHT100/L9001’
(g) Compliance marking for CE and WEEE

Start-up:

Upon pressing the power button ON/OFF for four seconds the following screen will be displayed. This screen has useful information about the product such as the serial numbers of device and the firmware version of HHT. This screen is displayed upon power up and by Device Info option on Menu screen 3.

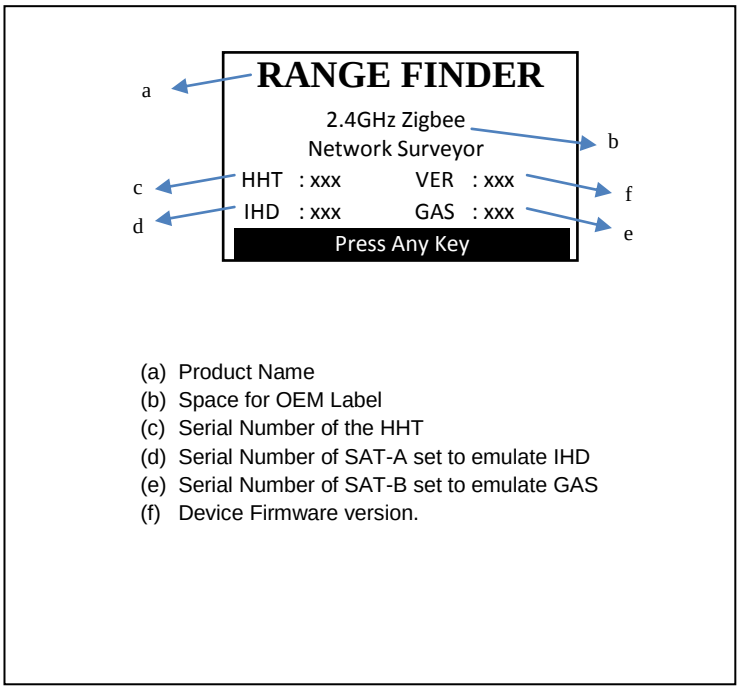

(a) Product Name
(b) Space for OEM Label
(c) Serial Number of the HHT
(d) Serial Number of SAT-A set to emulate IHD
(e) Serial Number of SAT-B set to emulate GAS
(f) Device Firmware version.

Menu Screens:

Menu items can be scrolled through using the navigations keys ⇦ ⇨ ⇧ and ⇩ to navigate through options and press OK button to enter the selected menu item. The battery symbol shows the current battery status.

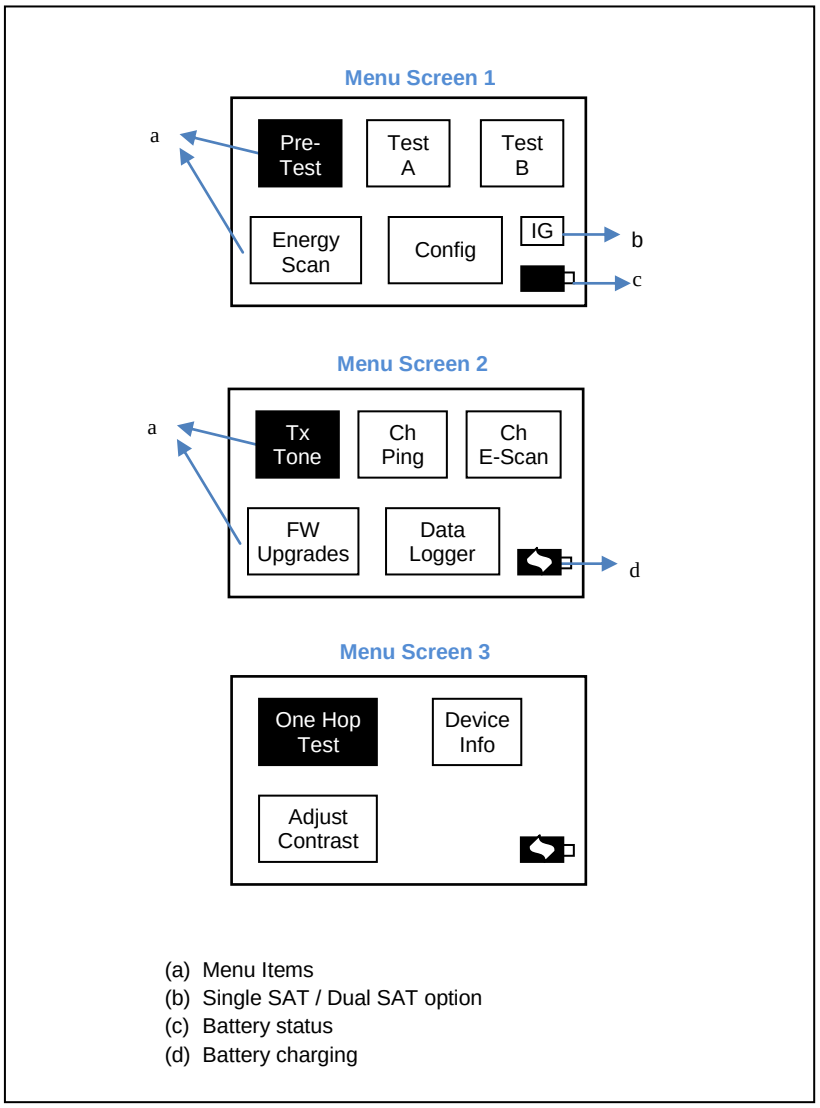

Figure 6: Start-up Screen

Normal Test Modes:

Pre-Test:

A Pre-Test is required before the 'Test A' or 'Test B' can be performed. The Pre-Test has the function of sanity checking the link between the HHT and the SAT units. Also performing Pre-Test will configure the current test settings in SAT units. A test carried out without running a Pre-Test may **NOT** present valid results. Any change in the Configuration settings should be followed by a Pre-Test.

Pre-Test Screen

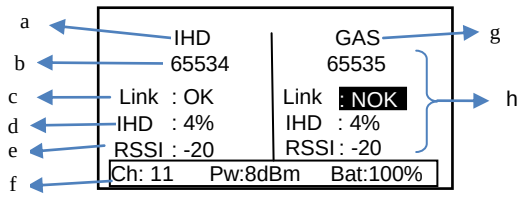

(a) Label of the first Satellite unit IHD
(b) Serial number of Satellite Labelled IHD
(c) Status of Pre-Test, *OK* for Success and *NOK* for Failure indicated by Red backlight
(d) Battery status of the IHD unit in percentage from 0 to 100%
(e) RSSI of the received data during Pre-Test
(f) HHT information
  i. Channel used for Pre-Test
  ii. Power output level for Pre-Test
  iii. Battery status of HHT
(g) Label of second Satellite unit GAS
(h) Information as listed in (b) to (e) relating to second Satellite Unit GAS

The completion of the Pre-Test is indicated by a short beep from the built-in buzzer. To return to the main menu from the Pre-Test Screen please press ESC

Test A / Test B:

Telegesis Range Finder tests are designed to evaluate the suitability of deployment of a Smart Energy device which is why they focus on the ZigBee Smart Energy recommended RF channels in the 2.4GHz spectrum. Tests A and B are performed on ZigBee SE channels 11, 14, 15 and 19 during Test-A, while the remaining of SE channels 20, 24 and 25 are tested in Test-B.

Although the Rangefinder is designed to assist with ZSE installations, the Continuous test and Energy scan can be used to analyse the entire ZigBee 2.4GHz spectrum.

At the start of each test-A/B, countdown is activated to give a chance for the operator to put the HHT in place of simulated test device such as electricity meter and move away from the meter housing if necessary. This timer is configurable in the Configuration Menu.

To perform tests A or B, navigate to the menu item on Menu Screen 1 using ⇦ and ⇨ keys and press OK button for the test start screen to appear. Continuous and

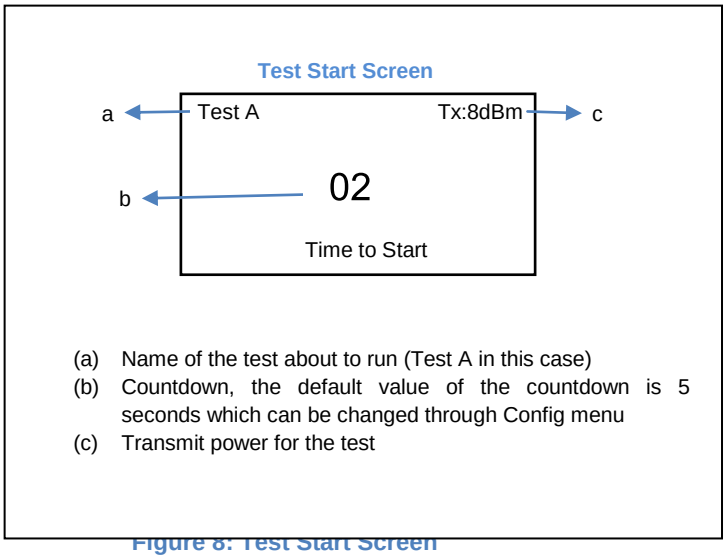
Test Start Screen
a
Test A
Tx:8dBm
c
b
02
Time to Start
(a) Name of the test about to run (Test A in this case)
(b) Countdown, the default value of the countdown is 5 seconds which can be changed through Config menu
(c) Transmit power for the test

Figure 8: Test Start Screen

Once the countdown has elapsed, the test starts and the test results are displayed for each channel for the test as the test progresses. The completion of the test is indicated by a short beep from the built-in buzzer. The display backlight changes to Red for test failure and to Blue colour if the test is a pass. Also the failed values will be inverted. For details of the Pass/Fail criteria please see section “Interpreting Test Results”.

Test-A Results Screen

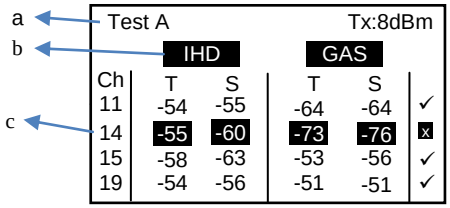

Test-B Results Screen

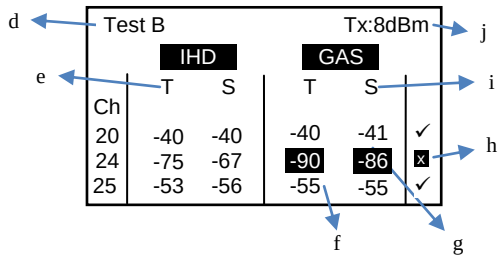

(a) Name of the test, Test A represents test on channels 11,14,15 and 19
(b) Label of the Satellite unit such as IHD
(c) Column of channel numbers valid for the selected test
(d) Name of the test, Test B represents a test on channels 20,24 and 25
(e) Label for RSSI column. 'T' represents RSSI measured at the HHT end
(f) RSSI measured at the HHT end for Satellite labelled GAS
(g) RSSI measured at the Satellite labelled GAS
(h) Overall test result - tick for Pass and cross for a Fail. RSSI values will inverted to indicated failed results
(i) Label for RSSI column. 'S' represents RSSI measured at the Satellite end
(j) Transmit power of the radio during the test

The completion of the Test-A/B is to the menu screen press ESC

Energy Scan:

The operator can make use of the Energy Scan of the network to get a measure of the noise or traffic present on a channel. Due to the dynamic nature of protocols (Wi-Fi, Bluetooth, ZigBee) each scan may show a different noise level even when done back to back. Each channel is scanned for noise for about 260mS. The results are painted for each channel as they become available.

-35dBm is considered to be very noisy and -85dBm is considered very quiet. The channels preferred by the ZigBee Smart Energy standard are highlighted in the test results. A sample of the test screen is shown below. To perform the Energy Scan, navigate to the Energy Scan menu item on Menu Screen 1 using ⇦ and ⇨ keys and press OK for the energy scan result graph as shown below to appear on screen.

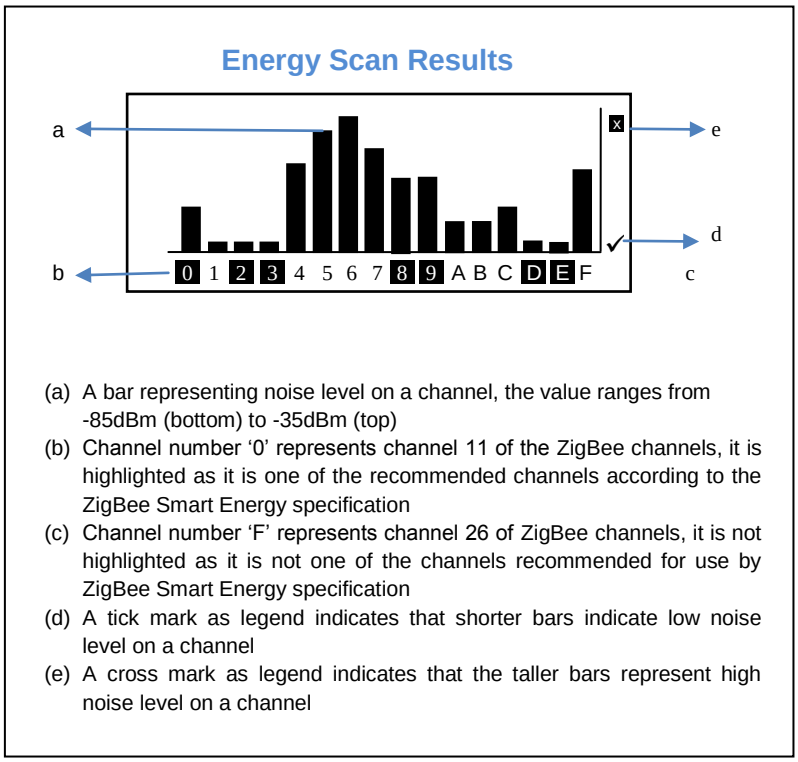

(a) A bar representing noise level on a channel, the value ranges from -85dBm (bottom) to -35dBm (top)
(b) Channel number '0' represents channel 11 of the ZigBee channels, it is highlighted as it is one of the recommended channels according to the ZigBee Smart Energy specification
(c) Channel number 'F' represents channel 26 of ZigBee channels, it is not highlighted as it is not one of the channels recommended for use by ZigBee Smart Energy specification
(d) A tick mark as legend indicates that shorter bars indicate low noise level on a channel
(e) A cross mark as legend indicates that the taller bars represent high noise level on a channel

Continuous Test Modes:

Tx Tone

The Transmit Tone option can be useful in situations in which one has to test immunity of the existing ZigBee network against noise from other devices operating on the same channel. This option will transmit a continuous tone on the user selected channel and power level. To transmit a tone on a channel, navigate to the Tx Tone menu option on menu screen 2 using ⇦ and ⇨ keys and press OK for following screen to appear.

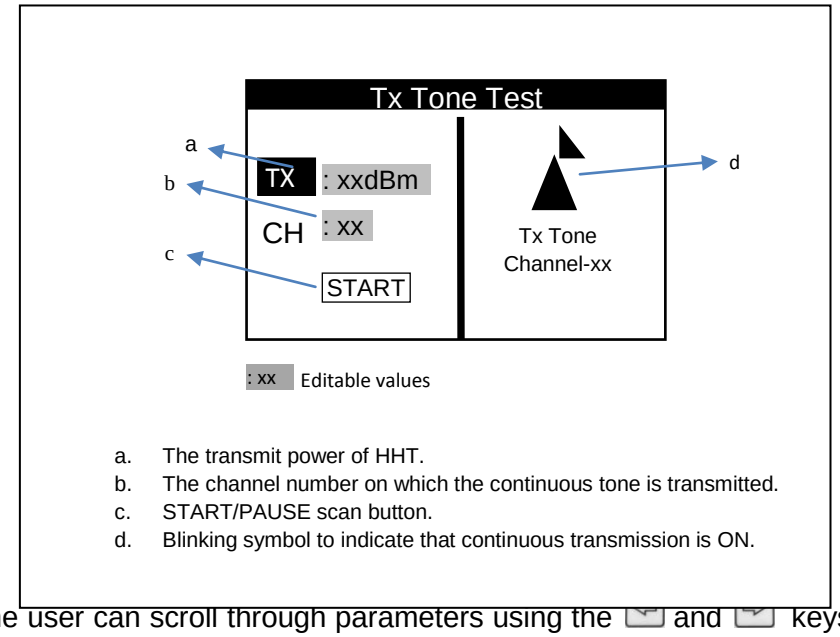

a. The transmit power of HHT.
b. The channel number on which the continuous tone is transmitted.
c. START/PAUSE scan button.
d. Blinking symbol to indicate that continuous transmission is ON.

Once on this screen, the user can scroll through parameters using the ⇦ and ⇨ keys, press OK to be able to edit the transmit power and channel number on which to transmit a continuous tone which can be done using the ⇧ and ⇩ keys and again press OK to set the new value.

After setting all the parameters, user will navigate to START option and press OK to start transmitting the tone. The symbol on the right will start blinking to indicate that the tone is being transmitted on the set channel.

a. The transmit power of HHT.
b. The channel number on which the continuous tone is transmitted.

Ch Ping

This is another continuous mode tests which can be used whenever the user wants to find the best location to position the IHD and GAS units to get the optimum signal strength that can be achieved.

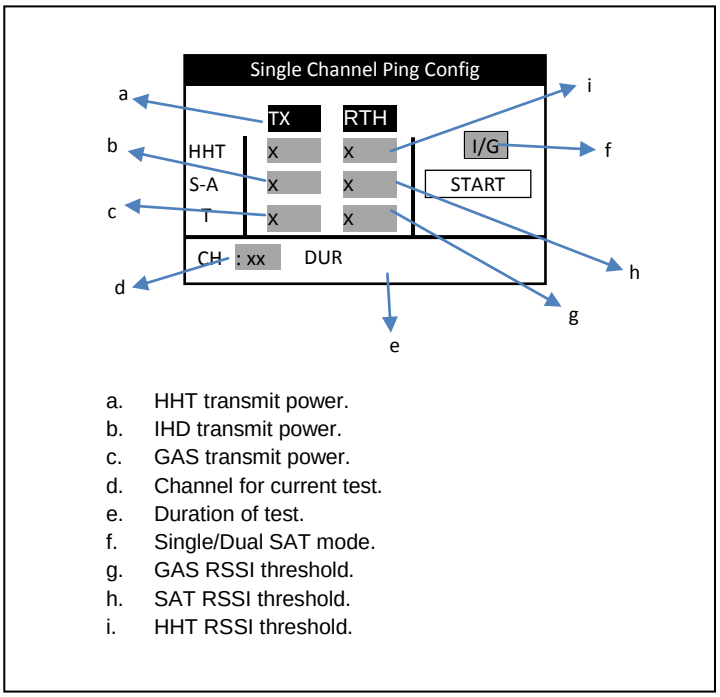

Figure 12: Continuous Ping Configuration

The main advantage of this test is the ability to set different test parameters such as Tx Power and RSSI threshold limits in all three (IHD; GAS and HHT) devices. This gives the operator flexibility to emulate different devices with different settings which can be the case in an actual ZigBee network.

This option can be used to measure the RSSI between the HHT and the IHD and/or GAS units. As with the other options navigate to the Ch Ping option on menu screen-2 using ⇦ and ⇨ keys and select the option using OK key. The single channel Ping Config screen as shown above will appear. There are different parameters as shown in the figure above which are to be set according to test requirements. To scroll through list of parameters, use ⇦ and ⇨ arrow keys. Press OK to edit, ⇧ and ⇩ to edit values and again press OK to set the parameter value for the continuous Ping test to be performed.

Once all the parameter values are set press navigate to START and press OK to start the test. Now the test will run for the time in sec set for DUR parameter. If the time set is 0 then the test will keep on running and updating the display with the Single Channel Ping Results screen unless stopped manually by pressing ESC key.

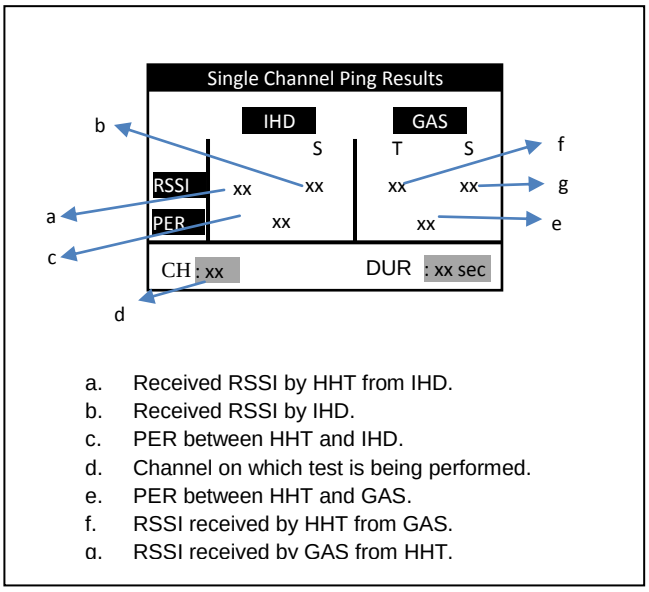

Figure 13: Continuous Ping Results

Ch E-Scan

This channel scan will show the dynamic values of the current noise levels in the selected channel. To select this single channel E-Scan option, navigate to the option on menu screen 2 using ⇦ and ⇨ keys and press OK. The following screen will appear.

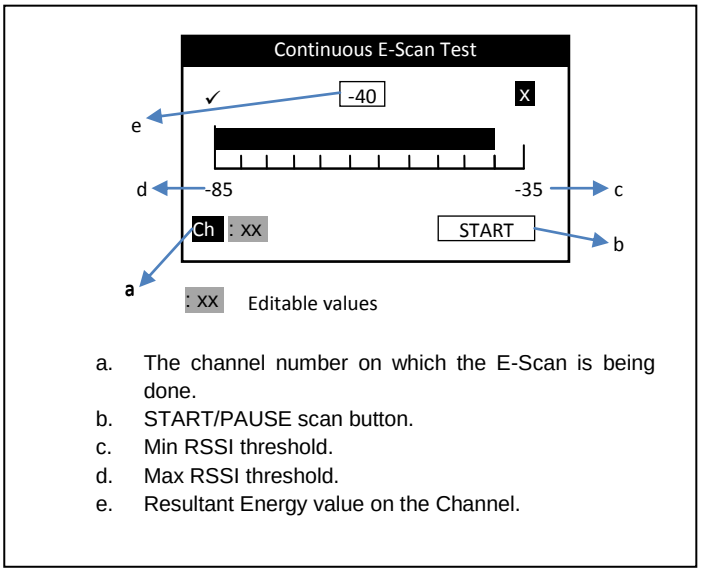

a. The channel number on which the E-Scan is being done.
b. START/PAUSE scan button.
c. Min RSSI threshold.
d. Max RSSI threshold.
e. Resultant Energy value on the Channel.

Figure 14: Single Channel E-Scan

Once on this screen, scroll through the list of channels (from CH-11 to CH-26) on which the noise scan is to be done by using ⇧ and ⇩ keys and again press OK to set the desired channel. The scan is started by navigating to START and pressing OK. The dynamic energy levels on that channel will be displayed on the screen as shown in the figure above.

One Hop Test

The One Hop test is a very useful test in systems that require a repeater in between two nodes. The IHD will operate as a repeater (RTR) between the HHT and GAS. All messages from the HHT which are directed towards GAS will be relayed by the RTR. This test will help finding the best possible location for the repeater to be placed and simultaneously tests the link between nodes through the repeater. The following configuration screen is displayed when the one hop test option is selected. The configuration screen allows the operator to modify the test parameters like Tx Power, RSSI threshold, Channel used for test and the duration of test. To scroll through list of parameters, use ⇦ and ⇨ arrow keys. Press OK to edit, ⇧ and ⇩ to edit values and then press OK to set the parameter value for the current session of test.

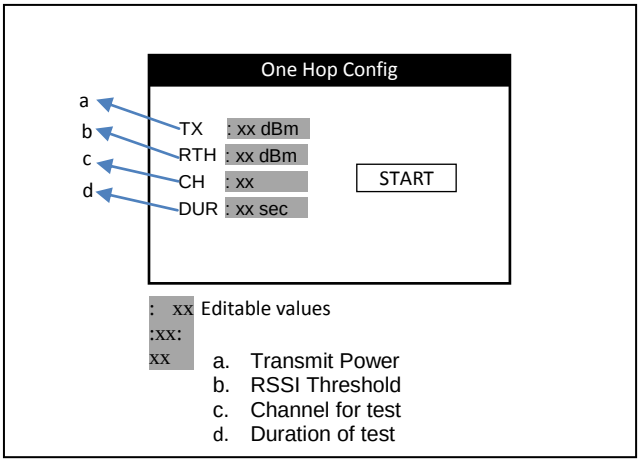

Figure 15 One hop configuration screen

Once parameters are set navigate to the start button on the screen and press OK to start the test. At this point the one hop results screen as shown below will be displayed on screen. Depending on the test state one of the following result screens will be displayed.

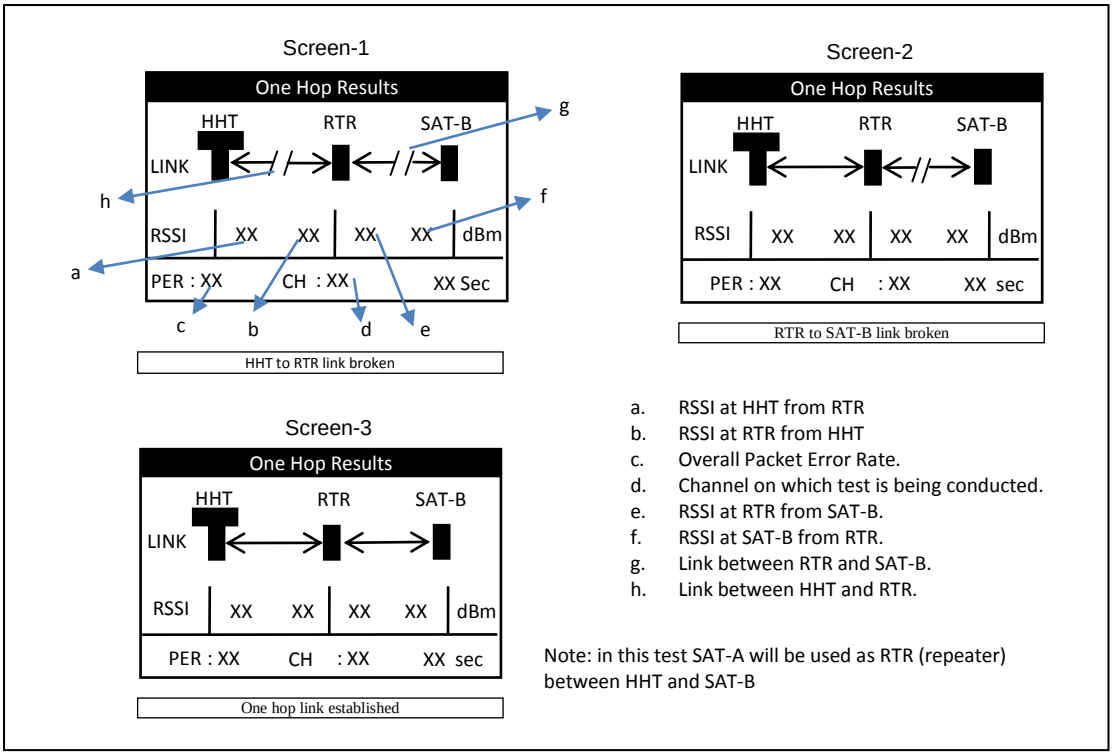

Figure 16 One Hop Test Result Screens

Screen-1:
This is the initialization state of the test when there is no one hop link established between HHT and GAS as shown in Screen-1. Initially when the devices (RTR or SAT) are out of range of the HHT or are not turned on the HHT cannot pass on the message to the GAS. Hence the link status shows a broken link between the HHT and RTR and GAS.

Screen-2:
The test will remain in the initialization state and periodically retry to establish the link (indicated by periodic beeps). To run the test, turn on the RTR and bring it closer to the HHT until you see Screen-2. When the HHT can communicate with RTR Screen-2 will be displayed which indicates that the link between HHT and RTR is established but the link between HHT and GAS is not established as the RTR cannot pass on the messages to the GAS. The HHT will try to continuously establish one hop link until successful when screen 3 is displayed.

Screen-3:
When Screen-2 appears, turn on the GAS and bring it closer to the RTR so that it can get the messages for the RTR. Once that happens Screen-3 will appear and the HHT will set the test channel on all devices and start pinging messages to GAS for the set test duration and update the RSSI values.

As the test is running the operator can move the devices to get a measure of the optimum range between devices. If any of the devices move outside the pre-configured RSSI limits or if some packets are missing the HHT will beep to indicate this and the operator can react accordingly.

To end the test press

key and the HHT will send a message to end the test on both RTR and GAS units. Until both units are in range the end message will not carry forward to GAS and the HHT will keep retrying which is indicated by periodic beeps on the HHT.

Device Configurations:

Single Satellite Configuration:

In some cases it may be necessary to run the test using only one Satellite unit. Such a situation might exist where only an electricity meter is being installed together with an IHD. In such cases it is possible to select the Satellite unit labelled IHD only to be used for test. To do so one has to go to the Home Screen and scroll to (using ⇦ and ⇨) item IG and press keys ⇧ or ⇩ to select between I or IG and press OK to save the setting. This setting is volatile and will revert to IG once the device is turned off.

Configuration Settings:

The Configuration Settings are the important device settings that are used by the HHT and SAT units while performing the tests. The Telegesis Range Finder is designed to be able to simulate any actual ZigBee SE device – such as IHD's, GAS meters, ESI's etc. All these devices may operate at different power levels and may be able to operate at different RSSI thresholds in an actual SE network. The Configuration Settings menu provides the way to introduce different settings for different devices settings at the time of test.

There are 10 pre-stored device profiles that can be used by the operator on site. The values within these settings cannot be changed without inputting a PIN number which is a 4 digit code. This pass code can be restricted to authorised technicians to prevent accidental entering of incorrect parameters by the operator in the field.

The Configuration Settings screen provides options for the user to change the test parameters. The Operator can navigate through the options using ⇦ and ⇨ keys may press OK to modify a setting. The Configuration screen is shown below,

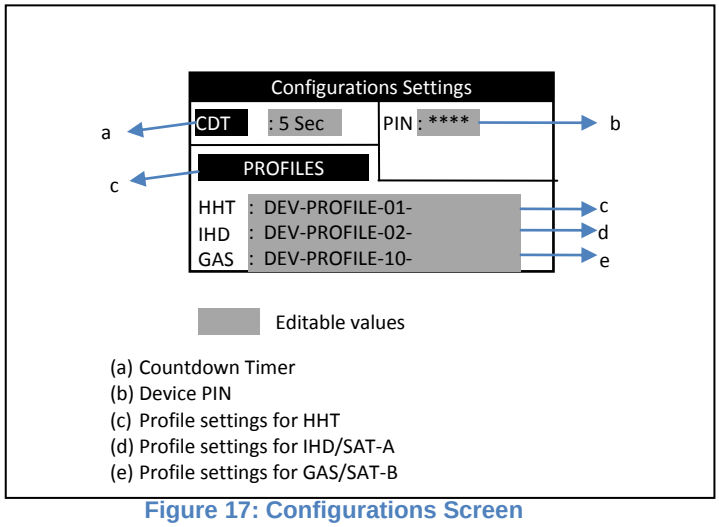

Figure 17: Configurations Screen

(a) The Countdown Timer value is set to a default of 5 seconds; the operator can change it to values between 10 and 120 seconds. The change made is volatile and will revert back to the default value[1] after power-off.

(b) A four digit PIN code allows access to advanced settings. The factory programmed PIN code is *1985* which can be entered using keys ⇦, ⇨, ⇧ and ⇩ and submitted using the OK key. This PIN can be reset to default or changed to a new PIN via a serial command.

(c) The Operator can select the configurations settings from previously stored settings. Memory required for 10 profiles reserved in non-volatile memory. These profiles can be edited and stored by PIN protected serial commands. To set configuration a particular settings from a particular profile and navigate to the profile for device using ⇦, ⇨, and then press OK. Then scroll through list of profile and press OK to set the device with settings from selected profile.

[1] The default CDT value can be changed in the advance configuration settings.

Advanced Configurations Settings:

The Advance Configurations Settings Screen is visible only after entering the correct device PIN.

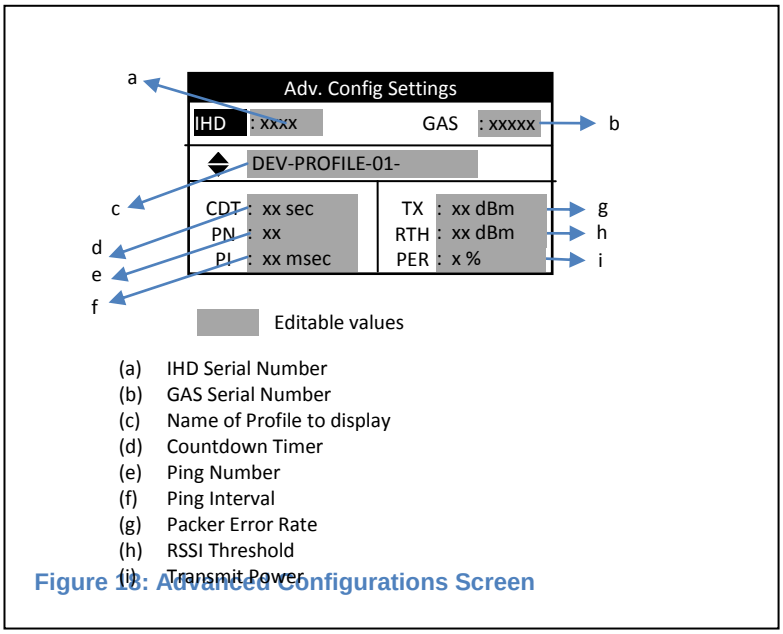

Figure 18: Advanced Configurations Screen

To display the settings of different profiles stored in the HHT navigate to the Profile section using ⇦ and ⇨ keys, then use ⇧ and ⇩ keys to scroll through the 10 profile settings stored into HHT. To change a particular parameter of the displayed profile use keys ⇦, ⇨ to navigate to the parameter and then press OK to start modifying it using keys ⇦, ⇨, ⇧ and ⇩, and press OK to save the settings. To cancel the changes while modifying press ESC. The parameters are explained below.

(a) IHD Serial: Serial number of Satellite unit labelled as IHD. Only the Satellite with matching serial number will be used in the test.
(b) GAS Serial: Serial number of Satellite unit labelled as GAS. Only the Satellite with matching serial number will be used in the test.
(c) Profile Name: Is the name of the profile out of the 10 stored profiles, whose settings are currently displayed on screen.
(d) Countdown Timer: This is the default setting of the Countdown time which is non-volatile and will be used each time the unit is turned on. The valid limit for the timer is 5 to 120 seconds.

(e) Packet Number: Number of packets to be sent to a Satellite on a given channel during the test, the selection is available between 50 to 100 packets and can be changed in steps of 5 packets.
(f) Packet Interval: The time gap between two consecutive packets sent during a test. The minimum interval can be 10mS and the maximum is 25mS and can be changed in steps of 5mS.
(g) TX Power: Transmit power level while sending the packets, the power setting available is from +8dBm to -9dBm in steps of 1dBm for standard version of Range Finder and values of 20,19,18,16,15,13,10,7,1 dBm for long range version
(h) Receive Threshold: The minimum receive signal strength for a packet to be considered valid for test purpose. The limit available is -85dBm to -45dBm changeable in steps of 1dBm.
(i) Packet Error Rate: Maximum allowed packet error rate for a successful test. The limits are 2% to 10% maximum - changeable in 1% steps.

Label	Parameter	Minimum Value	Maximum Value	Change Steps
CDT	Countdown Timer	5 Seconds	120 sec	1 sec
IHD	IHD Serial	0000	65535	1
GAS	GAS Serial	0000	65535	1
PN	Packet Number	50	100	5
PI	Packet Interval	10mS	25mS	5mS
TX	TX Power	-9dBm	8dBm	1dBm
RTH	Receive Threshold	-85dBm	-45dBm	1dBm
PER	Packet Error Rate	2%	10%	1%

Figure 19: Configurations Parameter Limits

The mechanism by which the above parameters affect the testing is explained in the section “Interpreting Test Results”.

Firmware Upgrades:

The Telegesis Range Finder comes with an Over-The-Air (OTA) Bootloader. This enables the HHT to upgrade its own firmware via the USB link and also remotely upgrade the firmware of the SAT units. The Firmware Upgrades function is PIN protected for security.

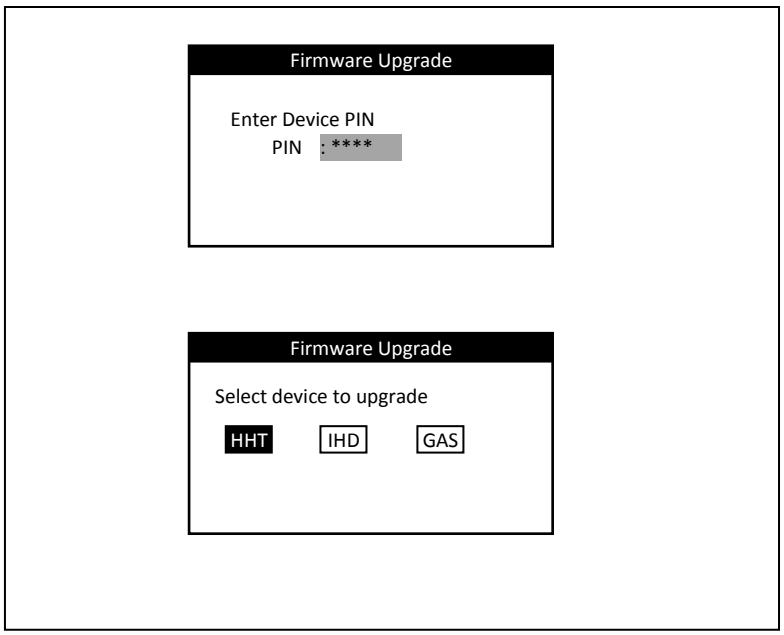

Figure 20 Firmware Upgrade Screens

Once the d n will give the options to select a device to perform the upgrade.

Upgrading the HHT unit:

Select the HHT unit for upgrade by navigating to it and pressing OK key. That will start the bootloader in serial mode and the new firmware image can be transferred via Xmodem at 115200 8N1 baud using the Telegesis Terminal or any other terminal program that supports Xmodem. The display on the HHT unit will show the following screen and the backlight will start to blink with red and green lights indicating that the bootloader is active and waiting for new firmware image.

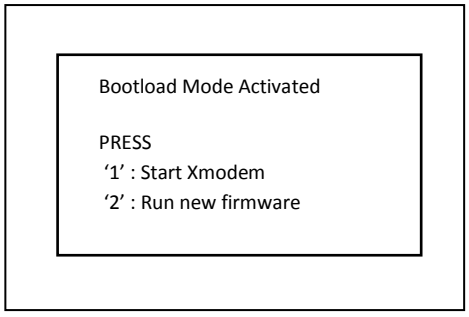

Figure 21 HHT Firmware Upgrade

- Now Press Enter key on host PC to get the bootloader options on the terminal as shown in the fig->

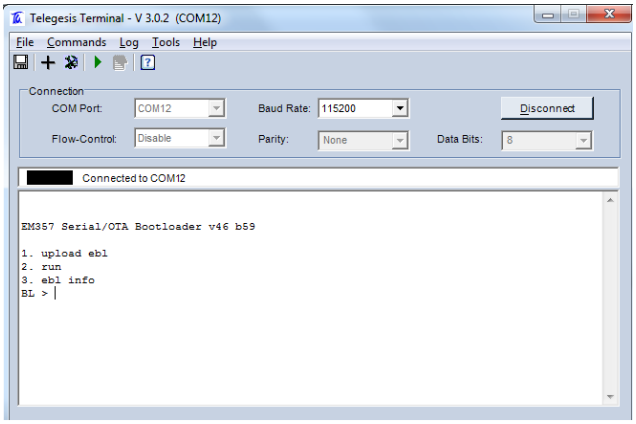

- To upload the new firmware image press '1' on the host PC, which will put the bootloader in Xmodem receive mode.
- Indicated by outputting 'C' on the terminal as shown in the fig->.
- Now Transfer the new firmware *.ebl file to the HHT unit.
- Once the file is transferred press '2' on host PC to run the new firmware.

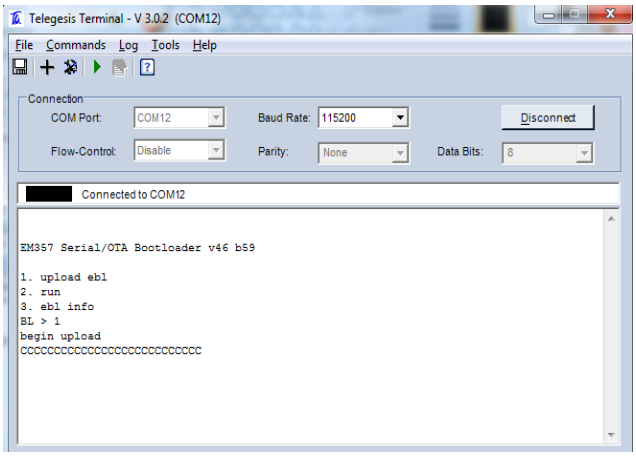

Figure 22 HHT Firmware upgrade options

Upgrading the SAT units:

It is possible to perform OTA firmware upgrades of the SAT units. The upgrade image (*.ebl file) will be passed to the HHT to send it across to the SAT unit. Select the IHD/GAS unit for upgrade by navigating to the particular option on the Firmware Upgrade Screen and press OK key. That will start the bootloader in OTA pass-through mode and the new firmware image can be transferred to the remote IHD or GAS unit over the air via HHT unit using Xmodem protocol at 115200 baud 8N1.

- When the remote SAT unit is selected for OTA firmware upgrade, the red LED starts flashing continuously.
- And the HHT outputs 'C' as shown in fig-> the terminal indicating that it expects the image to be transferred to SAT unit.
- Transfer the firmware upgrade *.ebl file to the HHT using Xmodem and the HHT will send it to the remote SAT unit.
- When the new firmware image is being transferred the red LED on the SAT unit stops blinking and the green LED starts flashing.

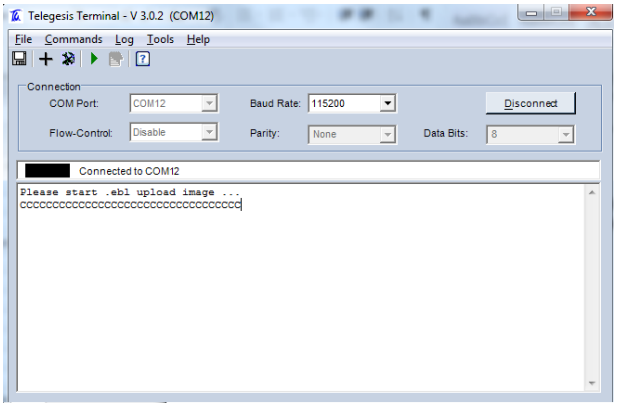

- If for any reason (eg. Battery on SAT dying while transfer of file or ZigBee link broken), the SAT unit will remain in the same bootload mode with red LED flashing. The HHT will timeout after 30 sec and send out a message on the terminal as shown in fig->
- The entire file needs to be transferred again to the SAT unit.

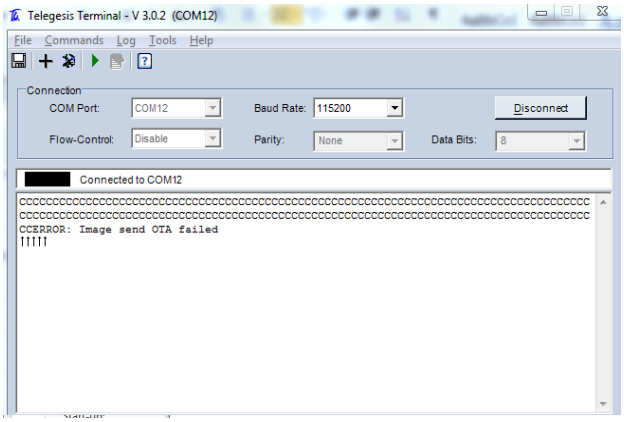

Figure 23 SAT Firmware Options

Data Logging:

The test results of Test-A/B and Energy scan results will be automatically logged into an on-board serial flash of 8MBits if the data logging feature is included into the device. The results will be stored along with the device configurations settings at the time of test. The Data Logging screen will pop up at every turn-on just after the Start-up screen to give a chance for user to enter the site ID before the start of tests. This screen can also be accessed via the data logger option on menu screen 2. The logger will start with a new record and increment record counter every time the site ID is changed.

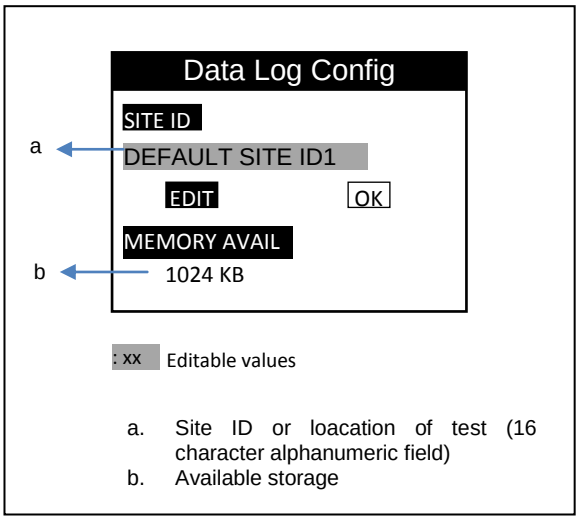

Figure 24 Data Logger Screen

Record Main Header

The record header will be of following type:

```
//Record size
 int16u recordSize;
//Main record header
typdef struct {
     int8u recordSiteId[16];
     int16u recordMainNumber;
}recordMainHeader;
```

Where,

recordSize – This is the total size of data collected at each site location. recordSize is the addition of the recordMainHeader bytes; recordSubHeader bytes; records. Since there can be any number of tests performed at any given site, the recordSize is variable hence it is calculated at the end of the last test carried out at the site (i.e. when the new site ID is entered by the user). But it is stored at the start of each record before the site ID in order to make scan through records faster.

recordMainHeader – This is the main record header at the start of each set of records collected at new site location.

recordSiteID[16] – This will be an 16 byte field used to store the site ID which will be entered by the user manually through arrow keys on the HHT. The first 8 bytes of the Site ID will be fixed and can be used as a Start Of Record (SOR) pointer.

recordMainNumber - It can be the Record ID or just a simple record counter which increments after each record stored in the flash. This number will increment when the test is done at new site location.

Record Sub Header

```
//Sub Record Header
Typedef struct{
      int8u recordSubNumber;
      int8u recordType;
      int8u recordLength;
      testSettings
      recordTestSettings;
}recordSubHeader;
```

recordSubHeader – This header will be at the start of each individual record for a test conducted at same site location.

recordSubNumber – The value recordSubNumber will indicate the record number for the current site and will increment after each test performed at the same site.

recordType – The one byte recordType identifier which will indicate which type of test results is stored in the record field.

recordLength – This value will be the actual length of the record excluding the record header bytes as the record header will be of fixed length.

recordTestSettings – This will be the configuration settings set in the HHT at the time of current test.

Record Structures

Test A record

Sub Header
recordType – 0x01
recordLength – 28
recordTestSettings –

```
//testSettings for Test A and Test B

Typedef struct{
      int8u PingNumber;
      int8u PingInterval;
      int8u perThreshold;
      int8s transmitPowerHHT;
      int8s transmitPowerA;
      int8s transmitPowerB;
      int8s rssiThresholdHHT;
      int8s rssiThresholdA;
      int8s rssiThresholdB;
}testSettings;
```

Record data

```
//test Records for Test A
typedef struct{
      int8u satARssi [4][2];
      int8u satBRssi [4][2];
      int8u perA[4];
      int8u perB[4];
      int8u testResult[4];
}recordTestARecords;
```

Column-0 – RSSI received at the SAT- A or GAS end
Column-1 – RSSI received by HHT
Row-0 – CH11 result
Row-1 – CH14 result
Row-2 – CH15 result
Row-3 – CH19 result

Test B record

Sub header
recordType – 0x02
recordLength – 21

Record Data

```
//test Records for Test B
typedef struct{
      int8u satARssi[3][2];
      int8u satBRssi[3][2];
      int8u perA[3];
      int8u perB[3];
      int8u testResult[3];
}recordTestBRecords;
```

Column-0 – RSSI received at the SAT- A or GAS end
Column-1 – RSSI received by the HHT
Row-0 – CH20 result
Row-1 – CH24 result
Row-2 – CH25 result

Energy Scan Record

recordType – 0x03
recordLength – 16

Record Data:

```
//test Record for Test B
typedef struct{
      int8u energy[16];
}EScanRecords;
```

The energy results array will hold the values of Energy scan on all the ZigBee channels 11-26

Device Info

This menu option displays the device information like the firmware version and serial numbers of the SAT units paired to the HHT unit.

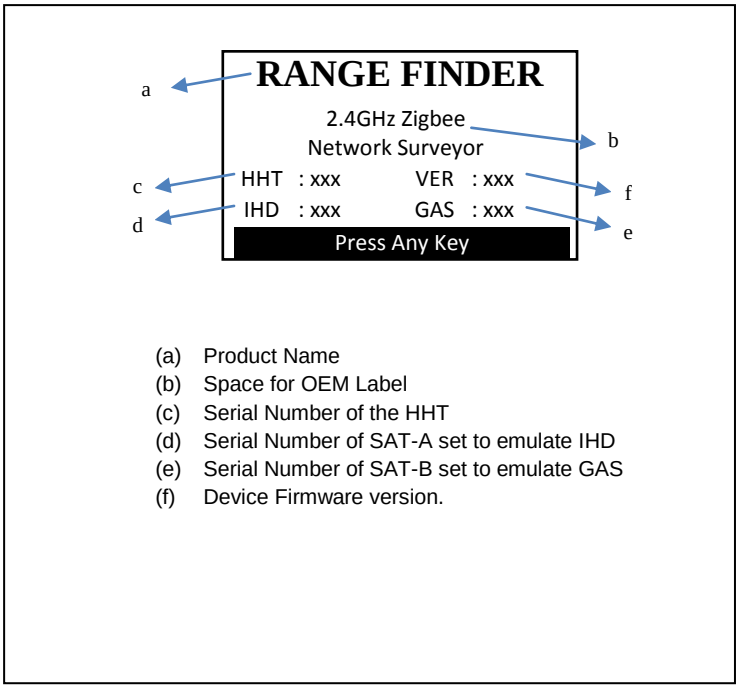

Figure 25: Device Information Screen

Adjust Contrast

This menu option lets user adjust the contrast of the screen by using ⇧ and ⇩ keys. After adjusting to the required contrast level press OK to apply the contrast. The HHT will beep once to indicate that the contrast is applied.

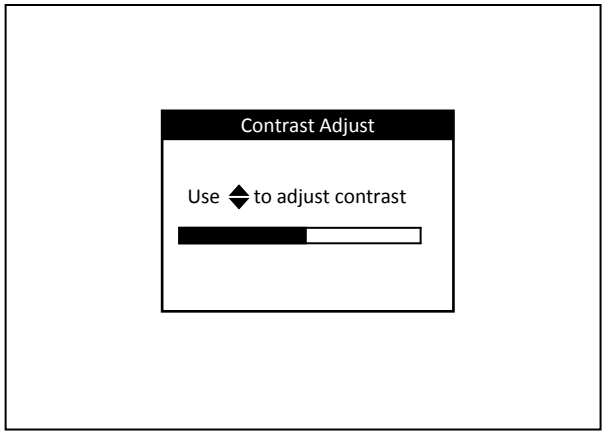

Figure 26: Adjust Contrast Screen

PAN Scan

The Rangefinder handheld unit can continuously scan for ZigBee PANs at site. The PAN scan can either be performed on a particular channel or on all 16 ZigBee channels.

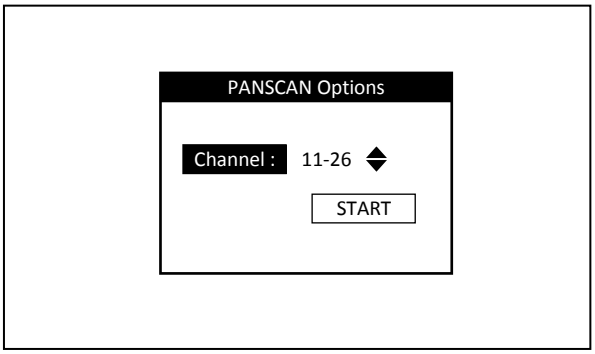

Figure 27 PAN scan options

The menu option shown above lets the user select the channel for PAN scan and start the scan. To navigate through the Channel and START option use ⇦ and ⇨ keys. Once the channel option is selected use ⇧ and ⇩ keys to scroll through the channel list. If 11-26 option is selected the PAN scan will be performed over the entire ZigBee spectrum. After selecting the channel press OK to apply the channel and press START. The PAN scan will start and any PAN's discovered during the scan will be added to the screen shown below.

PAN Scan results screen

.

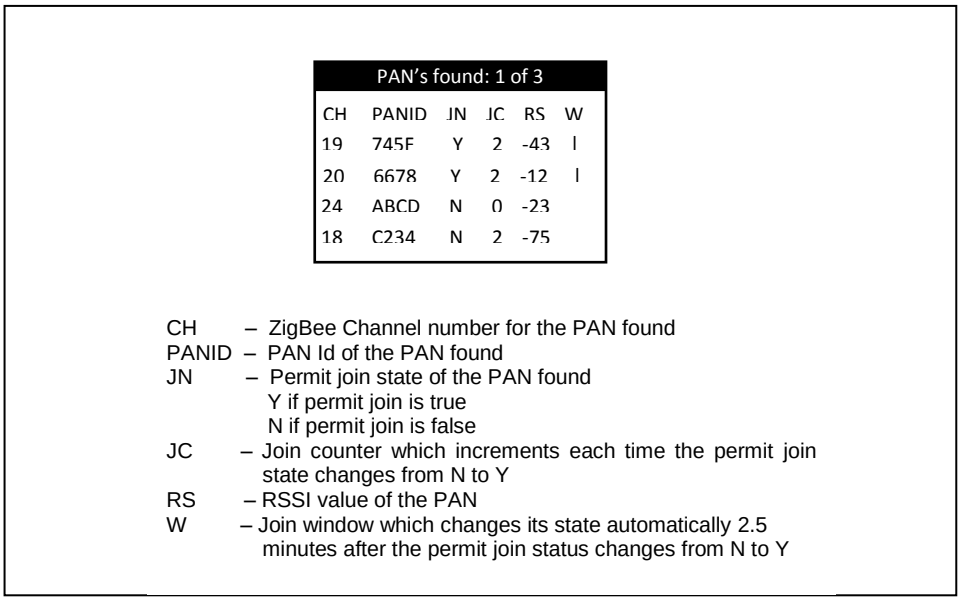
PAN's found: 1 of 3
CH PANID JN JC RS W
19 745F Y 2 -43 I
20 6678 Y 2 -12 I
24 ABCD N 0 -23
18 C234 N 2 -75
CH – ZigBee Channel number for the PAN found
PANID – PAN Id of the PAN found
JN – Permit join state of the PAN found
Y if permit join is true
N if permit join is false
JC – Join counter which increments each time the permit join state changes from N to Y
RS – RSSI value of the PAN
W – Join window which changes its state automatically 2.5 minutes after the permit join status changes from N to Y

Once the PAN scan is started handheld unit will continuously scan and update the information about PANs found on the screen. As many as 50 PANs can be discovered using this tool. The PAN list will update dynamically when the new PAN is found. The network found with permit join true is given higher priority in the list and will sit at the top of the list.

Pan change indications

- Once a new network is found with permit join true OR if an existing network changes it permit join state from N to Y, the HHT will beep 5 times and flash blue backlight for indication.
- If a new network is found with permit join false, it will be added to the list just after the existing PANs with permit join true, there will not be any indication for the new network found with permit join false, however if an existing network changes its state from Y to N, a long beep of 5 sec along with red backlight flash will indicate this change.
- After 2.5 minutes of permit join turning to Y the join window indicator will turn ON and HHT will beep 5 times and flash blue backlight just as when a new PAN with permit join is detected to indicate that the permit join is still true on the network to make the operator aware of extended join window opening.

Power

The HHT is powered by rechargeable NiMH batteries which are charged through the USB connection.

Batteries

The unit takes two 1.2 V 2000mAH NiMH batteries. To conserve the power consumption the unit will turn itself off after a period of inactivity. The battery compartment is accessible on the back side of the HHT and can be opened using a coin as shown in the Layout section. The battery compartment is designed to take 3 AA cells hence the extra space is blanked off using a dummy pass-through AA cell which should not be removed. The battery state is shown on the Home screen using the following symbol,

Figure 28: Battery Symbol

The above symbol is showing 50% battery charge remaining.

Charging

The HHT can be charged or powered using the USB port connection. The USB connector is a USB "B" Micro socket. The detection of the USB power source is indicated by a beep from the built-in buzzer. The HHT does not go to sleep while it is powered from USB power source. The charger charges the 2000mAh batteries at C/10 rate and it terminates the charge via voltage detection and a 12 hour timer. The power requirement for charging as well as operating the unit is 1.5Watts at 5 Volts. The charging state is shown on the Home screen by showing the following the symbol,

Figure 29: Battery Charging Symbol

The charging symbol shown above is replaced with the battery capacity remaining symbol as shown in Figure 28: Battery Symbol once the charging is finished.

Power Saving

The HHT incorporates several ways to reduce power consumption and extend battery life. Most of the power is consumed by the LED backlight for the screen so it is important to turn off the backlight when not needed; the backlight is turned off in the following instances:

a) No key press by the operator for 10 seconds
b) 60 Seconds after a test has been completed

Moreover the unit is turned off after a period of inactivity of 15 minutes to save power. This 15 minutes is counted from the time the unit is turned on using the ON/OFF and will be extended by 5 minutes if the user presses a key or a test is underway and the unit is in the last 5 minutes of the 15 minute wake period.

Satellite Unit

Layout

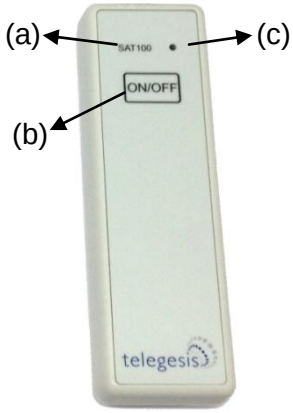

Figure 30: Satellite Front

(a) Model number: SAT100
(b) Power Button to turn the unit On or Off
(c) Red/Green LED to indicate the operation state of the unit

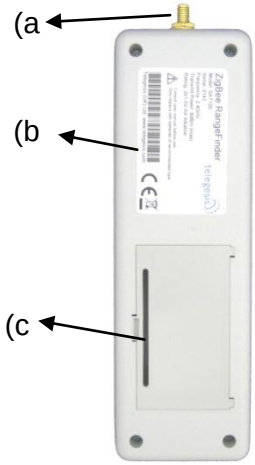

Figure 31: Satellite Back

(a) SMA connector for Antenna
(b) Product Label
(c) Battery Compartment

Figure 32: Satellite Product Label

(a) Product name
(b) Module number of Satellite (SAT100)
(c) Serial number of the product
(d) Operating parameters of the product
(e) Warning
(f) Barcode with following content:
<Model>/L<Serial>
e.g. 'SAT100/L157'
(g) Manufacturer's contact information
(h) Compliance marking for CE and WEEE
(i) Manufacturer's logo

Functionality

The Satellite units (IHD/B) are always listening to commands from the HHT to which they are paired to and respond with the information required to calculate the results for various tests performed by the HHT. There is an ON/OFF button for power ON/OFF and status LED's for SAT activity indication.

Buttons

There is only button on the Satellite which is the Power Button as shown in Figure 296. The Power Button needs to be pressed down for 3 seconds for it to take effect. When the Power Button is pressed, the LED indicator turns to solid RED colour and then turns off completely if the power is switched off or changes to flashing Red or Green if it is turned on.

LEDs

The indicator LED has two colours and it can represent following states for the Satellite.

Red LED	Green LED	Satellite State
ON	**OFF**	Power Button is pressed.
OFF	**Flashing 1 flash/sec**	SAT unit ON and Battery State healthy.
Flashing 1 flash/sec	**OFF**	SAT ON and Battery Low.
Flashing 2 flash/sec	**OFF**	SAT unit waiting for upgrade image.
ON	**Flashing 2 flash/sec**	SAT receiving new image from HHT

Figure 33: Satellite LED States

Power

Batteries

The Satellite is powered by two 1.5 V AA Alkaline batteries. The battery state is indicated by the flashing Red for low and flashing Green for good battery state. The percentage battery capacity remaining is also sent to the HHT as part of the Pre-Test and is shown on the Pre-Test screen (see Figure 7).

Power Consumption

To conserve the power the Satellite units are turned off after 15 minutes of wakeup period. If the Satellite receives any radio message from the HHT in the last 15 minutes of the wakeup period then it extends the wakeup period by 5 more minutes.

Nominal power consumed by the Satellite while it is turned on is 100mW.

Usage

System Topology

In a typical ZigBee Smart Energy installation it is expected the Electric and Gas meter will always be static whereas the IHD can move around. It is also expected that in some cases there will be no Gas meter present. This gives us the Electricity meter as a static element which will always be present. In many cases this is also the ESI for the Smart Energy network. The HHT is the centre point of the ZigBee RangeFinder and all the measurements are made with respect to the HHT, hence it makes sense to put the HHT in place where the Electricity meter will be installed and place the two Satellites in location where IHD and Gas meter are expected to be placed. A typical setup is shown below,

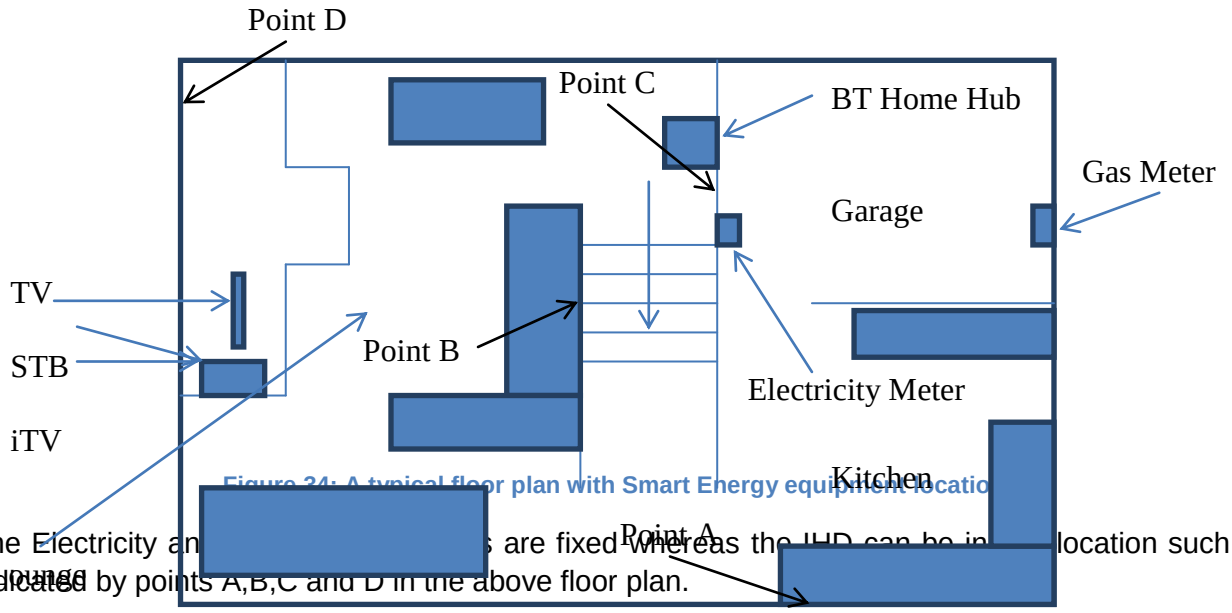

Figure 34: A typical floor plan with Smart Energy equipment locatio

The Electricity an s are fixed whereas the IHD can be in location such as indicated by points A,B,C and D in the above floor plan.

Figure 35: RangeFinder locations: Electric meter, Gas meter and Kitchen work surface

In the above picture the HHT is placed adjacent to the Electricity meter; the Satellite unit labelled GAS is placed on the GAS meter and the Satellite unit labelled IHD is placed on the kitchen work surface. The tests are then run on the HHT to make sure that all simulated devices will be able to communicate with each other.

Workflow

The following flowchart shows the expected procedural flow for performing a test.

Figure 36: Workflow

Interpreting Test Results

The RF over-the-air transmission mechanism, verified by observation, suggests that given a large enough sample size of RF packets the RSSI value does not change any more than a few dBm provided that the physical environment around the test units does not change during the test. If there is RF interference present during the test then it is more likely to cause failure of the packets to be received, decoded properly or a failure to pass the CRC test than to affect the RSSI value. Hence, it is important to take into account both RSSI values as well as Packet Error Rate when deciding the quality of the link.

A high number of packets (e.g. 50 packets 10millisecond apart) will be sent to the Satellite units from the Handheld unit which will echo the packets back and the results of the echoed-back packet will be used to calculate the *RSSI* , *PER* and eventually a PASS or FAIL result.

RSSI Calculation

The RSSI calculation is a mixture of Median and Mode and will be calculated as follows,

n = number of RSSI samples taken

Sn = value of nth RSSI sample

e = error margin (dBm)

* *n* samples will be taken and Sn stored in memory

* For each unique 'Sn' the occurrence of '*Sn* □ e' will be calculated and the highest occurring value shall be used as the *RSSI* value

Packet Error Rate

An '*n'* number of packets will be sent 't' seconds apart
Responses will be received and counted against the number sent
A packet error rate (*PER*) will be calculated in terms of percentage packet loss

Pass/Fail Criteria

For a Pass the *RSSI* and *PER* parameters needs to be following,

1) NUM_BAD_RSSI_VALUES **<** RSSI_BAD_NUM_THRESHOLD
2) RSSI **>** RSSI_THRESHOLD
3) PER **<** PER_THRESHOLD

Where:
The *NUM_BAD_RSSI_VALUES* is the total number of packets received with an RSSI value of less than *RSSI_THRESHOLD*
The *RSSI_BAD_NUM_THRESHOLD* is 10% (factory default) of total packets sent *'n'*
The *RSSI_THRESHOLD* is -85dBm as factory default
The *PER_THRESHOLD* factory default value is 10%
The above parameters can be changed from their factory default to user-specified in the Advanced Config menu.

Warranty

1. Telegesis warrants that at the date of delivery the Goods will conform in all material respects to any written specification published or provided by Telegesis and that for the periods set out below in respect of each product type the Goods will be free from defects in workmanship and materials under normal use and service. The Buyer must notify Telegesis of any defect in writing. Telegesis's obligation under this warranty will not arise until the Buyer returns the defective Goods at its own expense and risk, to Telegesis. Telegesis sole obligation under this warranty shall be at its option to replace or repair without charge such defective Goods or component parts thereof. Any replacement of Goods or component parts under this warranty shall not extend the period of warranty beyond that of the goods or component parts so replaced.
2. All Hardware is supplied with one year return to base warranty unless indicated otherwise. All Software is supplied with a 90-day warranty period.
3. With respect to any computer software comprised in the Goods supplied by Telegesis any defects arising after expiry of the warranty period referred to above should be notified to Telegesis in writing, Telegesis may at its discretion endeavour to correct any such defects but Telegesis gives no warranty that any such defects can be corrected or that defects will be corrected within a particular time.
4. Telegesis shall not be liable hereunder:
   a) If the Goods alleged to be defective have been repaired or altered by any person other than Telegesis designated personnel or authorised representative or other person approved by Telegesis in writing; or
   b) Where testing or examination by Telegesis reveals any alleged defect in the goods to have been caused by the buyers misuse, neglect, improper installation, failure to follow instructions (whether oral or in writing), or the supply by the Buyer of incorrect or inadequate instructions or information with the regards to the design of any Goods or to have been caused by any similar equipment to which the Goods are attached or in which the Goods are incorporated or any cause beyond the range of intended use of the Goods or by accident, fire or other hazard; or
   c) Where component parts alleged to be defective were not manufactured by Telegesis but were included in the Goods at the request of the Buyer, in which case the Buyer shall only be entitled to the benefit of any such warranty or guarantee as is given by the manufacturer or supplier of such parts to Telegesis.

5. If the goods are to be manufactured or any process is to be applied to them by Telegesis in accordance with a specification submitted by the Buyer, the Buyer shall indemnify Telegesis against all loss, damages, costs and expenses awarded against or incurred by Telegesis in connection with or paid or agreed to be paid by Telegesis in settlement of any claim which results from Telegesis's use of the Buyers specification, including but not limited to any claim for infringement of any patent, copyright, design, trade mark or other intellectual property rights of any other person.
6. Telegesis's liability hereunder shall be in lieu of any other representation (unless fraudulent), warranty or condition, expressed or implied by law or otherwise with respect to the goods or any liability imposed by common law, statute or otherwise and Telegesis hereby excludes all such representations (unless fraudulent), warranties and conditions and shall not be liable to the Buyer for any loss or damage whatsoever (including without prejudice to generality of the foregoing any liability in contract, negligence, or any other tort for indirect consequential or economic loss or for loss of profit or opportunity of any kind) arising directly or indirectly in connection with the contract, the Goods or otherwise except insofar as any exclusion or limitations of Telegesis liability hereunder is prohibited, void or enforceable by law.
7. Telegesis shall not be responsible in any manner whatsoever for any software, information or memory data stored on or integrated with any of the Goods returned to Telegesis for repair or replacement under this warranty.
8. Without prejudice to any other provision in these Terms, in any event Telegesis's total liability for any one claim or for the total of all claims arising from one act of default on Telegesis's part (whether arising from Telegesis's negligence or otherwise) shall not exceed the purchase price of the Goods the subject matter of any claim but nothing herein shall limit or exclude Telegesis liability for death or personal injury caused by Telegesis's negligence or Telegesis's liability for fraudulent r misrepresentation.
9. Where the buyer deals as a consumer within the meaning of the unfair contract Terms Act 1977 nothing in these terms shall restrict or exclude any liability of Telegesis for breach of its implied undertakings as to conformity of the goods with description or sample or as to their quality or fitness for the purpose.
10. In the case of a consumer transaction nothing in these terms sham affect the statutory rights of the Buyer as defined in the Consumer Transaction (Restrictions on Statements) Order 1976 (as mentioned).
11. The period or terms of the warranty contained in this clause shall only be varied or extended where Telegesis has granted the Buyer an Extended Warranty.

Compliance with Laws and Regulations

Any Buyer of Telegesis products (Goods) will not knowingly sell the Goods to any person where such sale may be or may result in a sale to an end user that may put Telegesis in breach of any laws, embargoes or regulations from time to time or any relevant jurisdiction. The Buyer hereby certifies that no Goods will be exported directly or indirectly outside the United Kingdom unless the appropriate prior authorisation to such export has been obtained from the Department of Trade and Industry, London, and/or (where applicable) the Office of Export Administration of the US Department of Commerce.

Disclaimer

Product and Company names and logos referenced may either be trademarks or registered trademarks of their respective companies. We reserve the right to make modifications and/or improvements without prior notification. All information is correct at time of issue. Telegesis (UK) Ltd. does not convey any license under its patent rights or assume any responsibility for the use of the described product.

This device should not be used without proper consideration and design of associated system architecture and redundant safety features in applications where failure may result in death or injury. The manufacturer accepts no responsibility for injury, death or loss human or material caused by the use or misuse of this device

Contact Information

Website: www.telegesis.com
E-mail sales@telegesis.com
Telegesis (UK) Limited
Abbey Barn Business Centre
Abbey Barn Lane
High Wycombe
Bucks
HP10 9QQ